



BarnesBrinkcraft
Serving the Norfolk Broads since 1967

WELCOME TO
QUARTET 3

BOAT INFORMATION

THE BOATYARDS NAME IS	BARNES BRINKCRAFT in WROXHAM
BOATYARDS TELEPHONE NUMBER	01603 782625 – 8am to 5pm
AFTER HOURS TELEPHONE NUMBER	01603 782625 – option one
THIS BOAT IS NAMED	QUARTET 3 (ELITE CLASS)
TURNAROUND DAYS	FRI/MON
LENGTH OF BOAT	35FT (10.67M)
WIDTH	12FT (3.66M)
STEERING	SINGLE
BRIDGE CLEARANCE HEIGHT WITH CANOPY AND SCREENS UP	8FT (2.43M)
BRIDGE CLEARANCE HEIGHT WITH CANOPY AND SCREENS LOWERED	7FT (2.14M)
BRIDGE CLEARANCE	WILL NOT PASS UNDER POTTER HEIGHAM BRIDGE
BERTHS	3 DOUBLES IN <u>2 CABINS & SALOON</u>

BED SIZES	SEE BOAT LAYOUT
BATHROOM	1 BATHROOM & 1 ENSUITE WITH TOILET/SHOWER
HOW TO DRAIN SHOWER	FRONT SHOWER - BUTTON ON SIDE WALL BACK SHOWER - BUTTON IN CUBICLE
COOKING FACILITIES	ELECTRIC 2 RING PLUS MICROWAVE COMBI OVEN
FRIDGE/FREEZER	SMALL FRIDGE WITH ICEBOX & UNDER COUNTER FRIDGE WITH FREEZER BOX
BOW THRUSTER?	YES
ELECTRIC ANCHOR WINCH?	YES
POWER	240v POWER SHORE INVERTER 5000w
HEATER	HEATER RUNS OFF THE DIESEL FANS RUN OFF THE ELECTRIC INSTRUCTIONS INCLUDED IN YOUR MANUAL
NUMBER OF POWER SOCKETS	8
WIFI	YES (LIMITED)

<p>THE MAXIMUM NUMBER OF BERTHS FOR THIS BOAT IS</p>	<p>6 (4+2)</p>
<p>ADDITIONAL INFORMATION</p>	<ul style="list-style-type: none"> • SLIDING COVER OVER RAISED SEATING AREA IN THE SALOON • IDEAL FOR TWO COUPLES • DVD PLAYER WITH USB SLOT • HAIR DRYER • LICENSED FOR 9 PERSONS MAX IF USED AS A DAY BOAT DURING YOUR HIRE

WIFI CONNECTION


To connect to your onboard Wi-Fi, you will need to go into your Wi-Fi settings and the name of your boat **OR** Brinkcraft guest will appear.

Enter the information from the voucher you have been given, once this has been entered, you will need to accept the terms and conditions and fill in a few details.

Once the voucher runs out you can purchase more data via the online portal. (prices online)

HEATING CONTROL

YOUR BOAT IS EQUIPPED WITH THIS HEATING CONTROL.

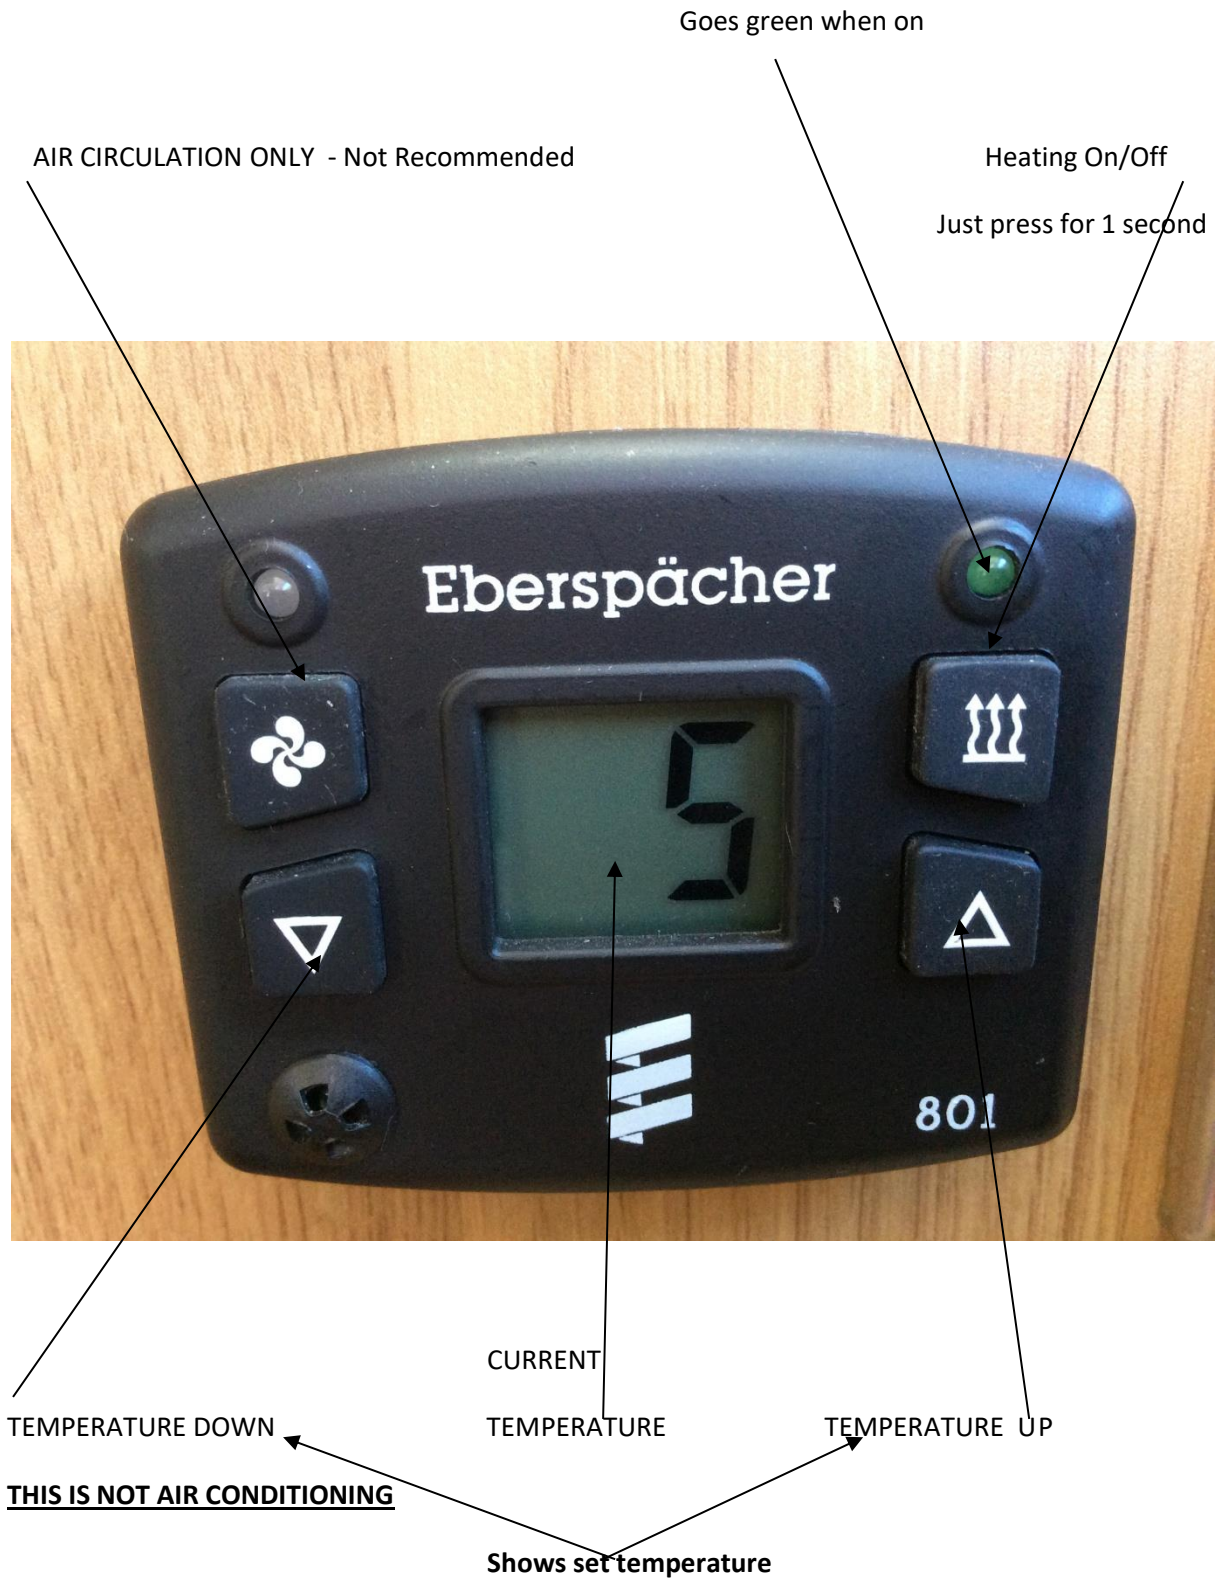

How to work your heating system

Switch heating on as shown on opposite page.

Allow 10 minutes for the system to start and heat to come through.

If heater does not start after 10 minutes it may be that the temperature in the boat is higher than set.

Set the temperature to maximum, and check the boat batteries are charged. If necessary start engine to charge batteries.

If this does not work please call the on call engineer. 01603 782625 option 3

When heater is switched off it will continue to run for up to 10 minutes while it cools itself down.

Quartet

Fri/Mon (1+3) or Sat/Tues (2+4) start - 3 doubles in 2 cabins & saloon - 2 toilets/showers in 1 bathroom & 1 en-suite

