



BarnesBrinkcraft
Serving the Norfolk Broads since 1967

WELCOME TO
SERENADE 8

BOAT INFORMATION

THE BOATYARDS NAME IS	BARNES BRINKCRAFT in WROXHAM
BOATYARDS TELEPHONE NUMBER	01603 782625 – 8am to 5pm
AFTER HOURS TELEPHONE NUMBER	01603 782625 – option one
THIS BOAT IS NAMED	SERENADE 8 (ELITE CLASS)
TURNAROUND DAYS	SAT/TUES
LENGTH OF BOAT	39FT (11.8M)
WIDTH	12FT (3.55M)
STEERING	SINGLE
BRIDGE CLEARANCE HEIGHT WITH SCREENS UP	7FT (2.14M)
BRIDGE CLEARANCE HEIGHT WITH SCREENS LOWERED	N/A
BRIDGE CLEARANCE	PASSES UNDER ALL BRIDGES <u>AT SUITABLE TIDES</u>
BERTHS	2 DOUBLES & 2 SINGLES OR 1 DOUBLE & 4 SINGLES IN <u>2 CABINS</u> & SALOON

BED SIZES	SEE BOAT LAYOUT
BATHROOM	2 ENSUITE BATHROOMS WITH TOILET/SHOWER
HOW TO DRAIN SHOWER	FRONT SHOWER - SWITCH IN PANEL ON WALL BACK SHOWER - SWITCH PANEL UNDER SINK
COOKING FACILITIES	ELECTRIC 2 RING INDUCTOR & MICROWAVE COMBI
FRIDGE/FREEZER	UNDER COUNTER FRIDGE NO FREEZER
BOW THRUSTER?	YES
ELECTRIC ANCHOR WINCH?	YES
POWER	240v POWER SHORE INVERTER 5000w SOLAR
HEATER	HEATER RUNS OFF THE DIESEL FANS RUN OFF THE ELECTRIC INSTRUCTIONS INCLUDED IN YOUR MANUAL
NUMBER OF POWER SOCKETS	8
WIFI	YES (LIMITED)

THE MAXIMUM NUMBER OF BERTHS FOR THIS BOAT IS	6 (4+2)
ADDITIONAL INFORMATION	<ul style="list-style-type: none"> • FORWARD RAISED STEERING POSITION • SPLIT SLIDING CANOPY • DVD PLAYER • INTEGRAL BATHING PLATFORM FOR EASY ACCESS • QUIET HYDRAULIC DRIVE ENGINE • HAIR DRYER • LICENSED FOR 6 PERSONS MAX IF USED AS A DAY BOAT DURING YOUR HIRE

WIFI CONNECTION

To connect to your onboard wifi, you will need to go into your wifi settings and the name of your boat **OR** Brinkcraft guest will appear.

Enter the information from the voucher you have been given, once this has been entered, you will need to accept the terms and conditions and fill in a few details.


Once the voucher runs out you can purchase more data via the online portal. (prices online)

Please make sure the curtains are left in forward position before opening the roof

Thank you

HEATING CONTROL

YOUR BOAT IS EQUIPPED WITH THIS HEATING CONTROL.

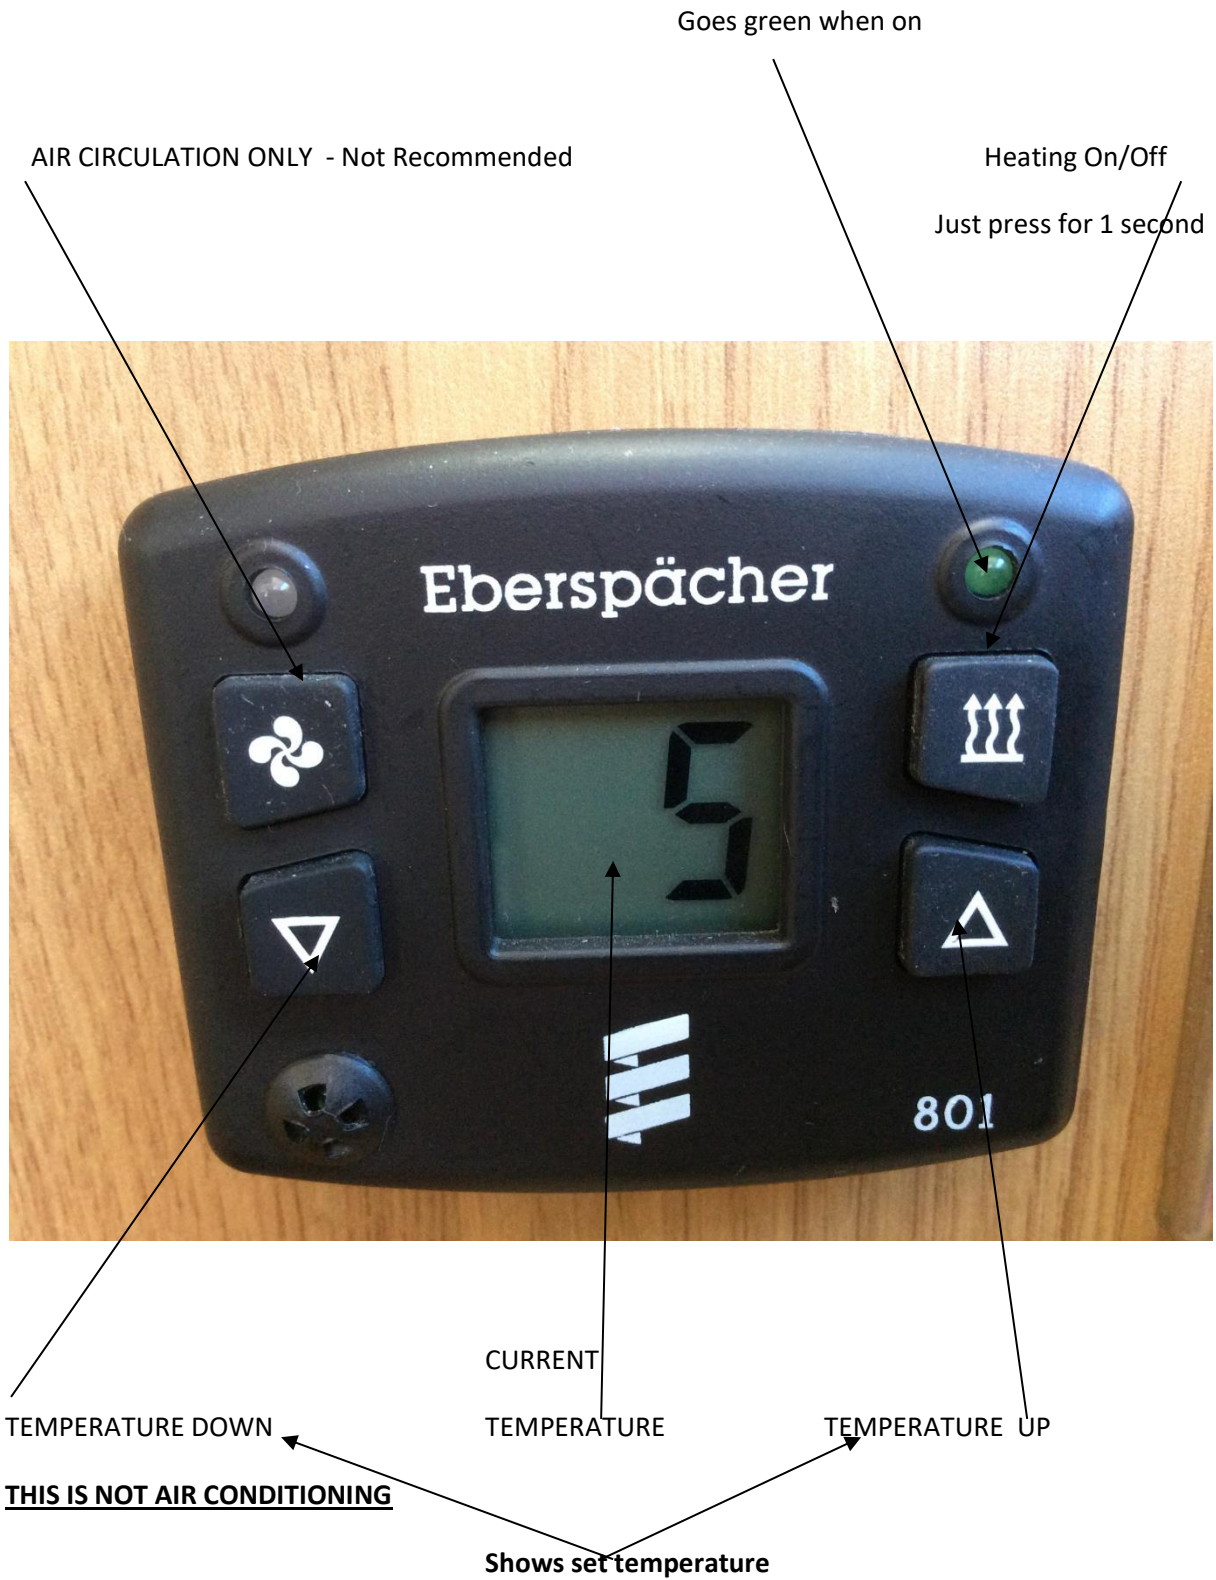

How to work your heating system

Switch heating on as shown on opposite page.

Allow 10 minutes for the system to start and heat to come through.

If heater does not start after 10 minutes it may be that the temperature in the boat is higher than set.

Set the temperature to maximum, and check the boat batteries are charged. If necessary start engine to charge batteries.

If this does not work please call the on call engineer. 01603 782625 option 3

When heater is switched off it will continue to run for up to 10 minutes while it cools itself down.

Serenade

- Fri/Mon start (1, 5+7) or Sat/Tues (2, 3, 4, 6+8) start - 2 double & 2 singles or
1 double & 4 singles in 2 cabins & saloon -

- 2 toilets/showers in 2 en-suites -

